

N61165.AR.004957
CNC CHARLESTON
5090.3a

WELL ABANDONMENT FORMS FOR SITE 42 CHICORA TANK FARM CNC
CHARLESTON SC
12/12/2002
SPECTRA TECH, INC.



RECEIVED

DEC 12 2002

PRIVATE WELL SECTION

December 9, 2002

SCDHEC
Bureau of Water
Private Well Program
2600 Bull Street
Columbia, SC 29201-1708

Re: Chicora Tank Farm
SCDHEC Site Identification #13350
Charleston Navy Complex
North Charleston, South Carolina
Well Abandonment Forms

Dear Sir/Madam:

Please find enclosed the Well Abandonment Forms for monitoring wells MW-1, MW-6D, MW-7, MW-12D, MW-13 and MW-18D. These wells were located at the Navy's Chicora Tank Farm in North Charleston, South Carolina. These wells were abandoned as part of the Active Corrective Action Plan for this site. Also enclosed is a map showing the location of these wells.


If you have any questions or need additional information, please do not hesitate to call me at 865-481-7837 ext. 279.

Sincerely,

STEP, Inc.

Roy Hoekstra, PE
Project Manager

Attachment

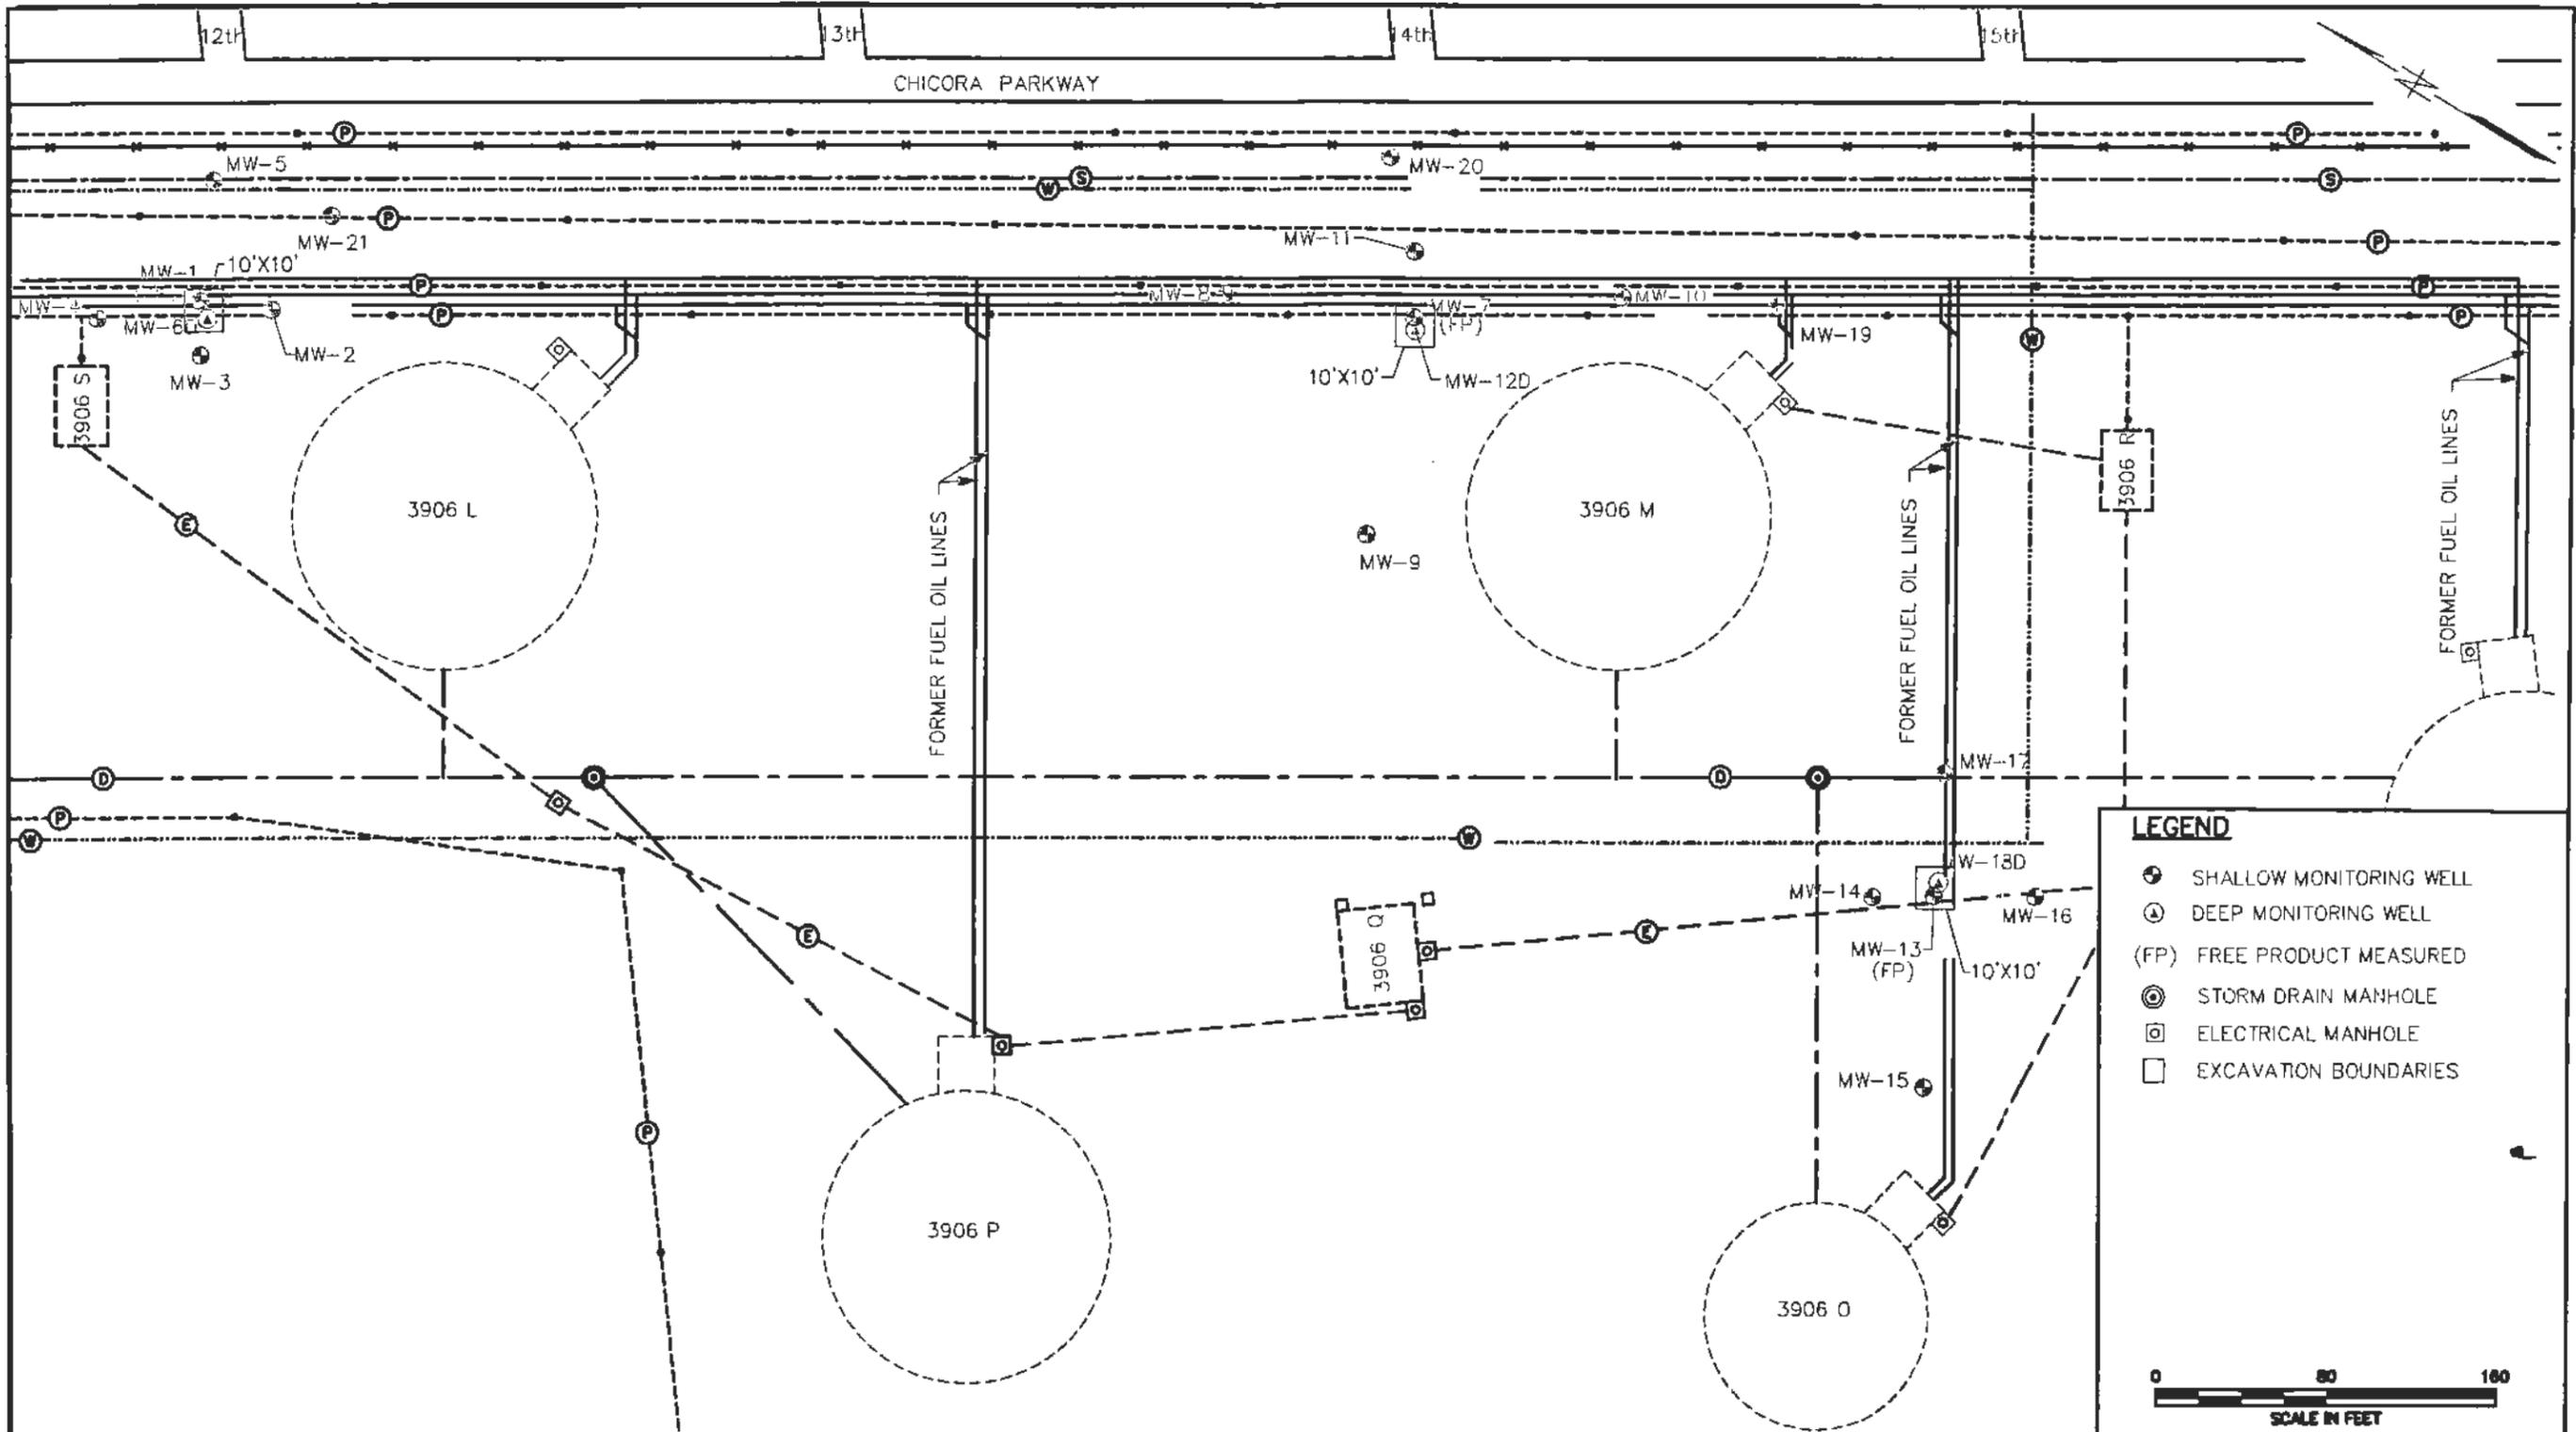

NO.	DATE	REVISIONS	BY	CHKD	APPD	REFERENCES	DRAWN BY	DATE	CONTRACT NO.	
							CHECKED BY	DATE	APPROVED BY	DATE
							COST/SCHED-AREA		APPROVED BY	DATE
							SCALE		DRAWING NO.	REV.
							AS NOTED		FIGURE 5-1	0

FACILITY LAYOUT MAP
 CHICORA TANK FARM - SITE 42
 CHARLESTON NAVAL SHIPYARD
 CHARLESTON, SOUTH CAROLINA

0 80 160
 SCALE IN FEET

- LEGEND**
- SHALLOW MONITORING WELL
 - ▲ DEEP MONITORING WELL
 - (FP) FREE PRODUCT MEASURED
 - ⊙ STORM DRAIN MANHOLE
 - ⊠ ELECTRICAL MANHOLE
 - EXCAVATION BOUNDARIES

INSTRUCTIONS
Water Well Record

This form is to be completed by an SC Certified Water Well Driller within thirty days of completion of the well. One copy is to be submitted to SCDHEC, another is intended for the well owner, and the final copy is for the well driller. In most cases, well location, owner, driller and other administrative information can be obtained from the Notice of Intent form. If additional comments are necessary, attach those on a separate sheet.

1. Include the name and present mailing address and telephone number of the well owner. This can be a tract owner or developer in the case of a new subdivision.
2. Indicate the exact number, street, city, zip, and county for the location of the well. If the street address is not available, attach a sketch map for general location and include lot number if it is in a new subdivision. "Same as 1" can be indicated if that is the case.
3. For public water supply, indicate system name and number.
4. Check appropriate box; for abandoned well, note grout depths. For the driller's log, describe the formation, indicate the thickness and complete the depth to the bottom of the stratum.
5. Insert any comments.
6. Insert the eight-digit number assigned when the Notice of Intent was submitted for a residential or irrigation well. This space can also be used for the SCDHEC site identification number.
7. Check box indicating use.
8. Indicate the total depth in the space provided; fill in the requested dates.
9. Check the box indicating the drilling method.
10. Check appropriate boxes and complete the information requested for the casing.
11. Complete the information requested for the screen; check the appropriate box.
12. Measure the static water level 24 hours after well completion and provide the measurement in the space.
13. Provide pumping level, time, and rates in the appropriate spaces.
14. Indicate whether these analyses were run.
15. Provide the requested information on filter pack.
16. Check the appropriate boxes and provide the type and depth of the grout.
17. Complete the requested information concerning the nearest source of possible contamination.
18. If installed, provide the information requested concerning the pump.
19. Indicate name, SC certification number, address and business or mobile (or both) telephone number and fax number for the well driller.
20. Sign and date the form.

The completed Form 1903 should be submitted to the SCDHEC, Bureau of Water, Private Well Program, 2600 Bull Street, Columbia, SC 29201-1708.

INSTRUCTIONS
Water Well Record

This form is to be completed by an SC Certified Water Well Driller within thirty days of completion of the well. One copy is to be submitted to SCDHEC, another is intended for the well owner, and the final copy is for the well driller. In most cases, well location, owner, driller and other administrative information can be obtained from the Notice of Intent form. If additional comments are necessary, attach those on a separate sheet.

1. Include the name and present mailing address and telephone number of the well owner. This can be a tract owner or developer in the case of a new subdivision.
2. Indicate the exact number, street, city, zip, and county for the location of the well. If the street address is not available, attach a sketch map for general location and include lot number if it is in a new subdivision. "Same as 1" can be indicated if that is the case.
3. For public water supply, indicate system name and number.
4. Check appropriate box; for abandoned well, note grout depths. For the driller's log, describe the formation, indicate the thickness and complete the depth to the bottom of the stratum.
5. Insert any comments.
6. Insert the eight-digit number assigned when the Notice of Intent was submitted for a residential or irrigation well. This space can also be used for the SCDHEC site identification number.
7. Check box indicating use.
8. Indicate the total depth in the space provided; fill in the requested dates.
9. Check the box indicating the drilling method.
10. Check appropriate boxes and complete the information requested for the casing.
11. Complete the information requested for the screen; check the appropriate box.
12. Measure the static water level 24 hours after well completion and provide the measurement in the space.
13. Provide pumping level, time, and rates in the appropriate spaces.
14. Indicate whether these analyses were run.
15. Provide the requested information on filter pack.
16. Check the appropriate boxes and provide the type and depth of the grout.
17. Complete the requested information concerning the nearest source of possible contamination.
18. If installed, provide the information requested concerning the pump.
19. Indicate name, SC certification number, address and business or mobile (or both) telephone number and fax number for the well driller.
20. Sign and date the form.

The completed Form 1903 should be submitted to the SCDHEC, Bureau of Water, Private Well Program, 2600 Bull Street, Columbia, SC 29201-1708.

INSTRUCTIONS
Water Well Record

This form is to be completed by an SC Certified Water Well Driller within thirty days of completion of the well. One copy is to be submitted to SCDHEC, another is intended for the well owner, and the final copy is for the well driller. In most cases, well location, owner, driller and other administrative information can be obtained from the Notice of Intent form. If additional comments are necessary, attach those on a separate sheet.

1. Include the name and present mailing address and telephone number of the well owner. This can be a tract owner or developer in the case of a new subdivision.
2. Indicate the exact number, street, city, zip, and county for the location of the well. If the street address is not available, attach a sketch map for general location and include lot number if it is in a new subdivision. "Same as 1" can be indicated if that is the case.
3. For public water supply, indicate system name and number.
4. Check appropriate box; for abandoned well, note grout depths. For the driller's log, describe the formation, indicate the thickness and complete the depth to the bottom of the stratum.
5. Insert any comments.
6. Insert the eight-digit number assigned when the Notice of Intent was submitted for a residential or irrigation well. This space can also be used for the SCDHEC site identification number.
7. Check box indicating use.
8. Indicate the total depth in the space provided; fill in the requested dates.
9. Check the box indicating the drilling method.
10. Check appropriate boxes and complete the information requested for the casing.
11. Complete the information requested for the screen; check the appropriate box.
12. Measure the static water level 24 hours after well completion and provide the measurement in the space.
13. Provide pumping level, time, and rates in the appropriate spaces.
14. Indicate whether these analyses were run.
15. Provide the requested information on filter pack.
16. Check the appropriate boxes and provide the type and depth of the grout.
17. Complete the requested information concerning the nearest source of possible contamination.
18. If installed, provide the information requested concerning the pump.
19. Indicate name, SC certification number, address and business or mobile (or both) telephone number and fax number for the well driller.
20. Sign and date the form.

The completed Form 1903 should be submitted to the SCDHEC, Bureau of Water, Private Well Program, 2600 Bull Street, Columbia, SC 29201-1708.

INSTRUCTIONS
Water Well Record

This form is to be completed by an SC Certified Water Well Driller within thirty days of completion of the well. One copy is to be submitted to SCDHEC, another is intended for the well owner, and the final copy is for the well driller. In most cases, well location, owner, driller and other administrative information can be obtained from the Notice of Intent form. If additional comments are necessary, attach those on a separate sheet.

1. Indicate the exact number, street, city, zip, and county for the location of the well. If the street address is not available, attach a sketch map for general location and include lot number if it is in a new subdivision.
2. For public water supply, indicate system name and number.
3. Indicate the total depth in the space provided; fill in the requested dates.
4. Check the box indicating the drilling method.
5. Check appropriate boxes; for the driller's log, describe the formation, indicate the thickness and complete the depth to the bottom of the stratum.
6. Insert any comments.
7. Include the name and present mailing address and telephone number of the well owner. "Same as 1" can be indicated if that is the case. This can be a tract owner or developer in the case of a new subdivision.
8. Indicate name, SC certification number, address and business or mobile (or both) telephone number for the well driller.
9. Insert the eight-digit number assigned when the Notice of Intent was submitted for a residential or irrigation well or the public supply number.
10. Check appropriate box.
11. Check appropriate boxes and complete the information requested for the casing.
12. Complete the information requested for the screen; check the appropriate box.
13. Measure the static water level 24 hours after well completion and provide the measurement in the space.
14. Provide pumping level, time, and dates in the appropriate spaces.
15. Indicate whether these analyses were run.
16. Provide the requested information on filter pack (filter pack).
17. Check the appropriate boxes and provide the depth of the grout.
18. Complete the requested information concerning the nearest source of possible contamination.
19. If installed, provide the information requested concerning the pump.
20. Sign and date the form.

The completed Form 1903 should be submitted to the SCDHEC, Bureau of Water, Private Well Program, 2600 Bull Street, Columbia, SC 29201-1708.

INSTRUCTIONS
Water Well Record

This form is to be completed by an SC Certified Water Well Driller within thirty days of completion of the well. One copy is to be submitted to SCDHEC, another is intended for the well owner, and the final copy is for the well driller. In most cases, well location, owner, driller and other administrative information can be obtained from the Notice of Intent form. If additional comments are necessary, attach those on a separate sheet.

1. Include the name and present mailing address and telephone number of the well owner. This can be a tract owner or developer in the case of a new subdivision.
2. Indicate the exact number, street, city, zip, and county for the location of the well. If the street address is not available, attach a sketch map for general location and include lot number if it is in a new subdivision. "Same as " can be indicated if that is the case.
3. For public water supply, indicate system name and number.
4. Check appropriate box; for abandoned well, note grout depths. For the driller's log, describe the formation, indicate the thickness and complete the depth to the bottom of the stratum.
5. Insert any comments.
6. Insert the eight-digit number assigned when the Notice of Intent was submitted for a residential or irrigation well. This space can also be used for the SCDHEC site identification number.
7. Check box indicating use.
8. Indicate the total depth in the space provided; fill in the requested dates.
9. Check the box indicating the drilling method.
10. Check appropriate boxes and complete the information requested for the casing.
11. Complete the information requested for the screen; check the appropriate box.
12. Measure the static water level 24 hours after well completion and provide the measurement in the space.
13. Provide pumping level, time, and rates in the appropriate spaces.
14. Indicate whether these analyses were run.
15. Provide the requested information on filter pack.
16. Check the appropriate boxes and provide the type and depth of the grout.
17. Complete the requested information concerning the nearest source of possible contamination.
18. If installed, provide the information requested concerning the pump.
19. Indicate name, SC certification number, address and business or mobile (or both) telephone number and fax number for the well driller.
20. Sign and date the form.

The completed Form 1903 should be submitted to the SCDHEC, Bureau of Water, Private Well Program, 2600 Bull Street, Columbia, SC 29201-1708.

INSTRUCTIONS
Water Well Record

This form is to be completed by an SC Certified Water Well Driller within thirty days of completion of the well. One copy is to be submitted to SCDHEC, another is intended for the well owner, and the final copy is for the well driller. In most cases, well location, owner, driller and other administrative information can be obtained from the Notice of Intent form. If additional comments are necessary, attach those on a separate sheet.

1. Include the name and present mailing address and telephone number of the well owner. This can be a tract owner or developer in the case of a new subdivision.
2. Indicate the exact number, street, city, zip, and county for the location of the well. If the street address is not available, attach a sketch map for general location and include lot number if it is in a new subdivision. "Same as 1" can be indicated if that is the case.
3. For public water supply, indicate system name and number.
4. Check appropriate box; for abandoned well, note grout depths. For the driller's log, describe the formation, indicate the thickness and complete the depth to the bottom of the stratum.
5. Insert any comments.
6. Insert the eight-digit number assigned when the Notice of Intent was submitted for a residential or irrigation well. This space can also be used for the SCDHEC site identification number.
7. Check box indicating use.
8. Indicate the total depth in the space provided; fill in the requested dates.
9. Check the box indicating the drilling method.
10. Check appropriate boxes and complete the information requested for the casing.
11. Complete the information requested for the screen; check the appropriate box.
12. Measure the static water level 24 hours after well completion and provide the measurement in the space.
13. Provide pumping level, time, and rates in the appropriate spaces.
14. Indicate whether these analyses were run.
15. Provide the requested information on filter pack.
16. Check the appropriate boxes and provide the type and depth of the grout.
17. Complete the requested information concerning the nearest source of possible contamination.
18. If installed, provide the information requested concerning the pump.
19. Indicate name, SC certification number, address and business or mobile (or both) telephone number and fax number for the well driller.
20. Sign and date the form.

The completed Form 1903 should be submitted to the SCDHEC, Bureau of Water, Private Well Program, 2600 Bull Street, Columbia, SC 29201-1708.